DSC-H1

SONY

LEVEL 1

SERVICE MANUAL

Ver 1.1 2005. 09

DSC-H1

US Model
Canadian Model
AEP Model
UK Model
E Model
Hong Kong Model
Australian Model
Chinese Model
Japanese Model
Korea Model
Tourist Model

CORRECTION-1

Correct your service manual as shown below.

Correction of supplied accessories

: Added portion : Corrected portion

Page	INCORRECT	CORRECT
4	***Checking supplied accessories.*** 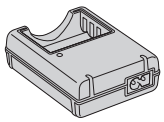 *CHARGER, BATTERY (US,CND,J) (1)* *1-479-378-11* *BATTERY CHARGER (BC-CS2) (1)* *(AEP,UK,E,AUS,HK,JE) (1)* *1-479-378-21* *BATTERY CHARGER (BC-CS2) (1)* *(KR,CH)* *1-479-378-31*	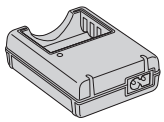 *BATTERY CHARGER (BC-CS2A/CS2B) (US,CND,J) (1)* *1-479-378-11* *BATTERY CHARGER (BC-CS2A/CS2B) (AEP,UK,E,AUS,HK,JE) (1)* *1-479-378-21* *BATTERY CHARGER (BC-CS2A/CS2B)(KR,CH)(1)* *1-479-378-31*
		 *ADAPTOR, CONVERSION 2P (1)* *(E)* *1-569-008-21*

Sony EMCS Co.

2005I1600-1
©2005.09
Published by DI Technical Support Department